
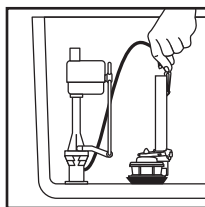


EASY TO INSTALL FÁCIL DE INSTALAR



200

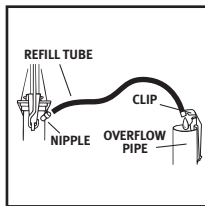



1. Turn off water supply. Flush toilet.
2. Attach one end of black refill tube to clip and the other end to nipple located near top of 400 valve or bottom of 100/200 valves.
3. Attach clip to overflow pipe. Trim refill tube as necessary to prevent kinking.
4. Turn on water supply.

NOTE: Flow from refill tube must be positioned just above the overflow pipe. Do not insert refill tube into overflow pipe. This will siphon water down overflow pipe causing valve to turn on and off, trying to keep tank full.

100/400

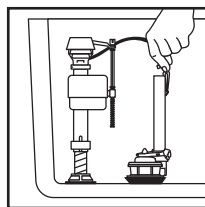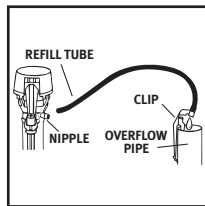



200

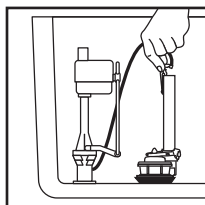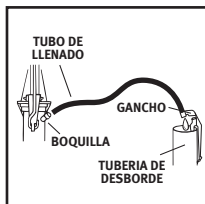

1. Cierre el suministro de agua. Accione la descarga del inodoro.
2. Anexas el extremo del tubo negro de recarga al sujetador y el otro extremo a la boquilla ubicada en la parte superior de la válvula 400 o en la parte inferior de las válvulas 100/200.
3. Anexas el sujetador al tubo de desagüe. Recorte la tubería de recarga necesaria para evitar que se enrosque.
4. Abra el suministro de agua.

NOTA: El flujo proveniente del tubo de llenado debe estar posicionado justo arriba de la cañería de desborde. No introduzca el tubo de llenado en la tubería de desborde. Esto, por medio de un efecto sifón, envía agua hacia abajo en la tubería de desborde, causando que la válvula se abra y se cierre, tratando de mantener el tanque lleno.

100/400

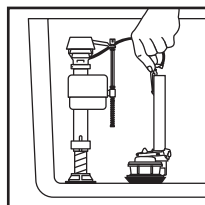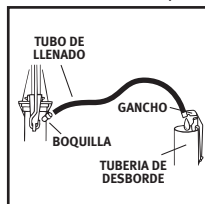

Red/Green color arrangement is a registered trademark of Fluidmaster, Inc. © 2007 Fluidmaster, Inc. Registered trademark of Fluidmaster, Inc. P/N 2-242, 11/07

La combinación de colores Rojo/Verde es una marca registrada de Fluidmaster, Inc. © 2007 Fluidmaster, Inc. Marca registrada de Fluidmaster, Inc.



Packaged in Mexico with Goods from the U.S.
Enpaquetado en México con Mercaderías
Provenientes de EE.UU.

Fluidmaster Inc.
30800 Rancho Viejo Road
San Juan Capistrano, CA 92675
www.fluidmaster.com